


COMPARA-2R+

Controlador de proceso

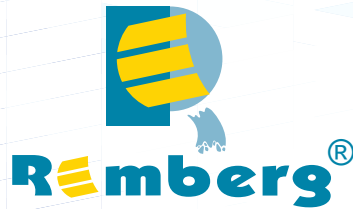

MENSAJES DE ALARMA PERSONALIZABLES

◀◀◀ "ALARMA HORNO" ▶▶▶

0/10V, 4/20mA
Pt100, Termopar
mV, ntc10K, ptc1K

1 ENTRADA
ANALÓGICA
UNIVERSAL

+

1 ENTRADA
DIGITAL



2 RELÉS
de SALIDA

+



1 SALIDA de
TRANSISTOR
PNP / SSR

CE



ALIMENTACIÓN
24.. 230VAC/DC

BORNAS
ENCHUFABLES

PROGRAMABLE TAMBIÉN
A TRAVÉS DE MÓVIL

Funciones:

- Arranque suave
- PID (autotuning)

GENERA/IMPRI
ME INFORME DETALLADO
CONFIGURACIÓN DEL EQUIPO

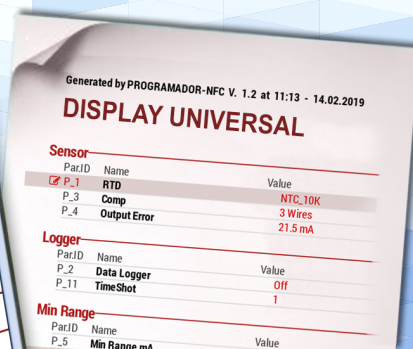


Table of contents

1	Safety guidelines.....	3
1.1	Organization of safety notices	3
1.2	Safety Precautions.....	4
1.3	Precautions for safe use.....	4
2	Model Identification.....	4
3	Technical Data.....	4
3.1	General Features	4
3.2	Hardware Features	4
3.3	Software Features.....	5
3.4	Programming mode.....	5
4	Dimensions and Installation.....	5
5	Electrical wirings.....	5
5.1	Wiring diagram	6
5.1.a	Power Supply.....	6
5.1.b	Analogue Input Ai.....	
5.1.c	Digital input	66
5.1.d	Digital output	6
5.1.e	Relay output Q1 - Q2	7
6	Display and Key Functions	7
6.1	Meaning of Status Lights (Led)	7
6.2	Keys.....	7
7	Controller Functions.....	8
7.1	Modification of main and alarm setpoint value.....	8
7.2	Automatic Tune	8
7.3	Manual Tune.....	8
7.4	Tuning once	8
7.5	Digital input functions.....	8
7.6	Automatic / Manual regulation for % output control	9
7.7	LATCH ON Function	9
7.8	Soft-Start Function	9
8	Reading and configuration through NFC.....	10
8.1	Configuration through memory card.....	10
8.2	Memory card creation/update	10
8.3	Configuration loading from memory card.....	11
9	Loading default values.....	11
10	Access configuration.....	11
10.1	Parameters list functioning	11
11	Table of configuration parameters	12
12	Alarm Intervention Modes.....	20
12.a	Absolute or threshold alarm active over (par. 123 RL IF = Ab.uPA).....	20
12.b	Absolute or threshold alarm active below (par. 123 RL IF = Ab.uPA).....	20
12.c	Absolute or threshold alarm referred to command setpoint active over (par. 123 RL IF = Ab.c.uPA).....	21
12.d	Absolute or threshold alarm referred to command setpoint active below (par. 123 RL IF = Ab.c.LA)	21
12.e	Band alarm (par. 123 RL IF = bAnd).....	21
12.f	Asymmetric band alarm (par. 123 RL IF = AbAnd).....	21
12.g	Upper deviation alarm (par. 123 RL IF = uP.dEu)	21
12.h	Lower deviation alarm (par. 123 RL IF = Lo.dEu)	22
12.1	Alarms label.....	22
13	Table of Anomaly Signals	22

Introduction

The controller stands out for the bright display which ensures optimal visibility and increased level of information for the operator beside a scrolling Help function.

These controllers relies on flagship programming mode by NFC/RFID technology with dedicated App PROGRAMADOR-NFC-Plus for Android devices (same already used for signal converters and indicators) not requiring wirings and power supply, allowing quick set-up/updates on site.

The outputs can be selected as command/multiple alarm modes. Useful power supply with extended range 24 to 230VAC / VDC with galvanic insulation of the net.

1 Safety guidelines

Read carefully the safety guidelines and programming instructions contained in this manual before connecting/ using the device. Disconnect power supply before proceeding to hardware settings or electrical wirings to avoid risk of electric shock, fire, malfunction.

Do not install/operate the device in environments with flammable/explosive gases.

This device has been designed and conceived for industrial environments and applications that rely on proper safety conditions in accordance with national and international regulations on labour and personal safety. Any application that might lead to serious physical damage/ life risk or involve medical life support devices should be avoided. Device is not conceived for applications related to nuclear power plants, weapon systems, flight control, mass transportation systems. Only qualified personnel should be allowed to use device and/or service it and only in accordance to technical data listed in this manual. Do not dismantle/modify/repair any internal component.

Device must be installed and can operate only within the allowed environmental conditions. Overheating may lead to risk of fire and can shorten the lifecycle of electronic components.

1.1 Organization of safety notices

Safety notices in this manual are organized as follows:

Safety notice	Description
Danger!	Disregarding these safety guidelines and notices can be life-threatening.
Warning!	Disregarding these safety guidelines and notices can result in severe injury or substantial damage to property.
Information!	This information is important for preventing errors.

1.2 Safety Precautions

This product is UL listed as open type process control equipment.	Danger!
If the output relays are used past their life expectancy, contact fusing or burning may occasionally occur. Always consider the application conditions and use the output relays within their rated load and electrical life expectancy. The life expectancy of output relays varies considerably with the output load and switching conditions.	Danger!
Loose screws may occasionally result in fire. For screw terminals of relays and of power supply, tighten screws to tightening torque of 0,51 Nm. For other terminals, tightening torque is 0,19 Nm	Warning!
A malfunction in the Digital Controller may occasionally make control operations impossible or prevent alarm outputs, resulting in property damage. To maintain safety in the event of malfunction of the Digital Controller, take appropriate safety measures, such as installing a monitoring device on a separate line.	Warning!

1.3 Precautions for safe use

Be sure to observe the following precautions to prevent operation failure, malfunction, or adverse affects on the performance and functions of the product. Not doing so may occasionally result in unexpected events. Do not handle the Digital Controller in ways that exceed the ratings.

- The product is designed for indoor use only. Do not use or store the product outdoors or in any of the following places.
 - Places directly subject to heat radiated from heating equipment.
 - Places subject to splashing liquid or oil atmosphere.
 - Places subject to direct sunlight.
 - Places subject to dust or corrosive gas (in particular, sulfide gas and ammonia gas).
 - Places subject to intense temperature change.
 - Places subject to icing and condensation.
 - Places subject to vibration and large shocks.

- Installing two or more controllers in close proximity might lead to increased internal temperature and this might shorten the life cycle of electronic components. It is strongly recommended to install cooling fans or other air-conditioning devices inside the control cabinet.
- Always check the terminal names and polarity and be sure to wire properly. Do not wire the terminals that are not used.
- To avoid inductive noise, keep the controller wiring away from power cables that carry high voltages or large currents. Also, do not wire power lines together with or parallel to Digital Controller wiring. Using shielded cables and using separate conduits or ducts is recommended. Attach a surge suppressor or noise filter to peripheral devices that generate noise (in particular motors, transformers, solenoids, magnetic coils or other equipment that have an inductance component). When a noise filter is used at the power supply, first check the voltage or current, and attach the noise filter as close as possible to the Digital Controller. Allow as much space as possible between the Digital Controller and devices that generate powerful high frequencies (high-frequency welders, high-frequency sewing machines, etc.) or surge.
- A switch or circuit breaker must be provided close to device. The switch or circuit breaker must be within easy reach of the operator, and must be marked as a disconnecting means for the controller.
- The device must be protected by a fuse 1A (cl. 9.6.2).
- Wipe off any dirt from the Digital Controller with a soft dry cloth. Never use thinners, benzine, alcohol, or any cleaners that contain these or other organic solvents. Deformation or discoloration may occur.
- The number of non-volatile memory write operations is limited. Therefore, use EEprom write mode when frequently overwriting data, e.g.: through communications.
- Chemicals/solvents, cleaning agents and other liquids must not be used.
- Non-respect of these instructions may reduce performances and safety of the devices and cause danger for people and property.

Environmental policy / WEEE. Do not dispose electric tools together with household waste material. According to European Directive 2012/19/EU on waste electrical and electronic equipment and its implementation in accordance with national law, electric tools that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

2 Model Identification

DIN-rail mounting model with power supply 24..230 VAC/VDC 50/60 Hz – 6 Watt/VA	
	1 A.I. + 2 relays 2 A + 1 SSR + 1 D.I.

3 Technical Data

3.1 General Features

Displays	4 digits 0,52''(13,2mm), 5 digits 0,30''(7,6mm)
Operating conditions	Temperature: 0-45° C -Humidity 35..95 uR% - Max. altitude: 2000m
Sealing	:Open type, IP20 (not UL evaluated)
Material	Box and front panel PC UL94V0
Weight	pprox. 210 g

3.2 Hardware Features

Analogue input	A11 Configurable via software. Input: Thermocouple type K, S, R, J,T,E,N,B. Automatic compensation of cold junction from -25...85° C. Thermoresistances: PT100, PT500, PT1000, Ni100, PTC 1K, NTC 10K (β 3435K) Input V/mA: 0-1 V, 0-5 V, 0-10 V, 0-20 o 4-20 mA, 0-60 mV. Pot. Input: 1...150 KΩ.	Tolerance (@25° C) ± 0.2% ±1 digit (on F.s.) for thermocouple, thermoresistance and V/mA. Cold junction accuracy 0.1° C/°C. Impedence: 0-10 V: Ri>110 KΩ 0-20 mA: Ri<5 Ω 0-40 mV: Ri>1 MΩ
Relay outputs	Config. as command and alarm output	Contacts: Q1, Q2: 5A - 250 VAC for resistive load.
SSR output	Config. as command and alarm output	12/24 V, 25 mA.
Power-supply	Extended power-supply 24..230 VAC/VDC ±15% 50/60 Hz	Consumption: 9 Watt/VA


3.3 Software Features

Regulation algorithms	ON-OFF with hysteresis. - P, PI, PID, PD with proportional time
Proportional band	0..9999°C o °F
Integral time	0,0..999,9 sec (0 excludes)
Derivative time	0,0..999,9 sec (0 excludes)
Controller functions	Manual or automatic Tuning, selectable alarm, protection of command and alarm setpoints.

3.4 Programming mode

by keyboard	..see paragraph 12
App PROGRAMADOR-NFC PLUS	..through download the App on Google Play Store®, see paragraph 10 When activated by a reader/interrogator supporting NFC-V protocol, the controllers are to be considered a VICC (Vicinity Inductively Coupled Card) according to ISO/IEC 15693 and it operates at a frequency of 13.56 MHz. The device does not intentionally emit radio waves.

4 Dimensions and Installation

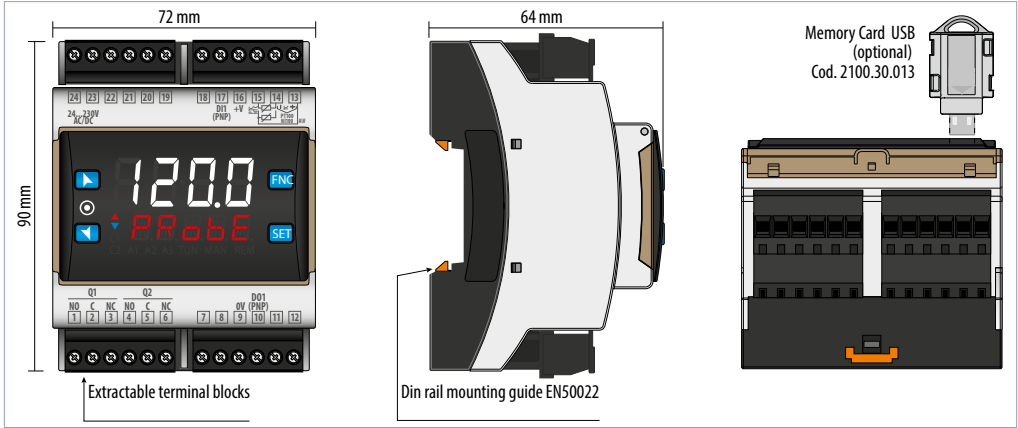

5 Electrical wirings


This controller has been designed and manufactured in conformity to Low Voltage Directive 2006/95/EC, 2014/35/EU (LVD) and EMC Directive 2004/108/EC, 2014/30/EU (EMC). For installation in industrial environments please observe following safety guidelines:

- Separate control line from power wires.
- Avoid proximity of remote control switches, electromagnetic contactors, powerful engines.
- Avoid proximity of power groups, especially those with phase control.
- It is strongly recommended to install adequate mains filter on power supply of the machine where the controller is installed, particularly if supplied 230Vac.

The controller is designed and conceived to be incorporated into other machines, therefore CE marking on the controller does not exempt the manufacturer of machines from safety and conformity requirements applying to the machine itself.

- Wiring of pins on Device: use crimped tube terminals or flexible/rigid copper wire with diameter 0.2 to 2.5 mm² (min. AWG30, max. AWG14, Minimum temperature rating of the cable to be connected to the field wiring terminals, 70°C). Cable stripping length 7 to 8 mm. Tighten screws to tightening torque of 0,51 Nm.

5.1 Wiring diagram

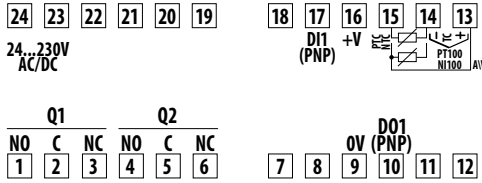

5.1.a Power Supply

Switching power supply 24..230 VAC/VDC $\pm 15\%$ 50/60 Hz - (ATR224) and 9 Watt/VA . Galvanic insulation.

5.1.b Analogue Input Ai

For thermocouples K, S, R, J, T, E, N, B.

- Comply with polarity
- For possible extensions, use compensated cable and terminals suitable for the thermocouples used (compensated).
- When shielded cable is used, it should be grounded at one side only.

For thermoresistances PT100, Ni100.

- For the **three-wire** connection use wires with the same section.
- For the **two-wire** connection short-circuit terminals 13 and 15
- When shielded cable is used, it should be grounded at one side only.

For thermoresistances NTC, PTC, PT500, PT1000 and linear potentiometers.

When shielded cable is used, it should be grounded at one side only to avoid ground loop currents.

For linear signals in Volt and mA

- Comply with polarity
- When shielded cable is used, it should be grounded at one side only to avoid ground loop currents.
- It's possible to select +V at 12Vdc or 24Vdc, by configuring parameter 282 u.o.u.t. (GROUP R - d 5P. - Display and interface).

5.1.c Digital input

Digital input can be enabled by parameters.
Close pin "DI1" on pin "+V" to enable digital input.
It is possible to put in parallel the digital inputs of different devices joining together the pins (0V).

5.1.d Digital output

Digital output PNP (including SSR) for command or alarm.
Range 12 VDC/25 mA or 24 VDC/15mA selectable by parameter 282 u.o.u.t.
Wire the positive control (+) of the solid state relay to the pin DO(x).
Wire the negative control (-) of the solid state relay to the pin 0V.

5.1.e Relay output Q1 - Q2

	<p>Capacity 5 A / 250 VAC for resistive loads. See chart below.</p>
	<p>Electrical endurance Q1 - Q2: 5 A, 250 VAC, resistive loads, 10^5 operations. 20/2 A, 250 VAC, $\cos\phi = 0.3$, 10^5 operations.</p>

6 Display and Key Functions

	1	<p>Normally displays the process. During the configuration phase, it displays the parameter being inserted.</p>
	2	<p>Normally displays the setpoint. During the configuration phase, it displays the parameter value being inserted.</p>

6.1 Meaning of Status Lights (Led)

3	C1	ON when the command output 1 is active.
5	A1	ON when alarm 1 is active.
6	A2	ON when alarm 2 is active.
8	TUN	ON when the controller is executing an auto-tuning cycle.
9	MAN	ON when "Manual" function is active.
10	REM	ON when the controller communicates through serial. Flashes when the remote setpoint is enabled.




6.2 Keys

11		<ul style="list-style-type: none"> Increases the main setpoint. During configuration allows to scroll the parameters or the groups of parameters. Increases the setpoints.
12		<ul style="list-style-type: none"> Decreases the main setpoint. During configuration allows to scroll the parameters or the groups of parameters. Decreases the setpoints.
13	SET	<ul style="list-style-type: none"> Allows to visualize command and alarm setpoints. During configuration allows to enter the parameter to be modified and confirms the variation.
14	FNC	<ul style="list-style-type: none"> Allows to enter the Tuning launch function, automatic/manual selection. During configuration works as exit key (ESCAPE).
15		<ul style="list-style-type: none"> Both ON during parameter modification, when this is not a default value.

7 Controller Functions

7.1 Modification of main and alarm setpoint value

Setpoint value can be modified from keyboard as follows:

	Press	Display	Do
1		Value on display 2 changes.	Increases or decreases the main setpoint value.
2		Visualizes the other setpoints on display 1. Display 2 shows the setpoint type.	
3		Value on display 1 changes.	Increases or decreases the alarm setpoint value.

7.2 Automatic Tune

Automatic tuning procedure allows a precise regulation without delving into the PID regulation algorithm. Selecting Auto on par. 73 *tun.1* (for the regulation loop 1), the controller analyzes the proces oscillations and optimizes the PID parameters. Led **TUN** flashes.

If the PID parameters are not yet selected, at the device switch-on, it is automatically launched the manual Tuning procedure described into the next paragraph.

7.3 Manual Tune

Manual procedure allows the user greater flexibility to decide when to update PID algorithm parameters. During the manual tuning, the device generates a step to analyze the system inertia to be regulated and, according to the collected data, modifies PID parameters.

After selecting *MANU.* on par. 73 *tun.1*, the procedure can be activated as follows:

- Running Tuning by keyboard:**

Press **ENC** until display 2 shows tunE with display 1 on dis. and then press **SET**: display 1 shows Enab. Led **TUN** switches ON and the procedure starts.

- Running Tuning by digital input:**

Select tunE on par. 231 *d.i.f.*. At first activation of digital input (commutation on front panel) led **TUN** led switches on and at second activation switches off.

To avoid an overshoot, the treshold where the controller calculates new PID parameters is determined by this operation:

Tune threshold = Setpoint - "Set Deviation Tune" (par. 74 *5.d.t.*)

Ex.: if the sepoint is 100.0°C and the Par.32 *5.d.t.* is 20.0°C the threshold to calculate PID parameters is (100.0 - 20.0) = 80.0°C.

For a greater precision on PID parameters calculation it is suggested to start the manual tuning procedure when the process deviates from the setpoint.

7.4 Tuning once

Set *once* on parameter 73 *tun.1*

Autotuning procedure is executed only once at next device restart. If the procedure doesn't work, will be executed at next restart.

7.5 Digital input functions

The device functions related to digital inputs, can be enabled by parameter 231 *d.i.f.*.

- 2t.SU.*: Two threshold setpoint modification: with digital input active the device regulates on **SET**2, otherwise reulates on **SET**1;
- tun.*: The regulation is enabled only with digital input active,
- tunE*: Enables/disables the Tuning if par. 73 *tun.1* is selected as *MANU.*;
- RU.PA.i.*: If par. 48 *PA.i.* is selected as *EnAb.* or *En.Sto.*, with impulse command on digital input, the device switches the related regulation loop, from automatic to manual and vice versa.
- RU.PA.c.*: If par. 48 *PA.i.* is selected as *EnAb.* or *En.Sto.* the devices switches to manual the related regulation loop, with digital input active, otherwise the regulation is automatic.
- RE.EY.*: the device execute a cooling type regulation with digital input active, otherwise the regulation is of heating type;
- RES.*: Allows the reset of the output if manual reset is active for the alarms and for the command outputs.

7.6 Automatic / Manual regulation for % output control

This function allows to switch from automatic functioning to manual command of the output percentage. With par. 48 *PAR.L* (for regulation loop 1) it is possible to select two modes.

1 First selection (*ENAB*) allows to enable with **FNC** the writing *P---* on display 1, while on display 2 is showed *AutoN*.

Press **SET** to visualize *MAN*; it's now possible, during the process visualization, modify through the keys **▲** and **▼** the output percentage. To back to automatic, with the same procedure, select *AutoN*. on display 2: immediately led **MAN** switches off and functioning backs to automatic.

2 Second selection (*ENSET*) enables the same functioning but with two important variants:

- If there is a temporary power failure or after switch-off, the manual functioning as well as the previous output percentage value will be maintained at restarting.
- If the sensor breaks during automatic functioning, the controller switches to manual mode while maintaining the output percentage command unchanged as generated by the PID immediately before breakage.

Ex: on an extruder the command in percentage of the resistance (load) is maintained also in case of input sensor failure.


7.7 LATCH ON Function

For use with input *Pot.* and with linear input (0..10 V, 0..40 mV, 0/4..20 mA) it is possible to associate start value of the scale (par. 4 *LL.L*) to the minimum position of the sensor and value of the scale end (par. 5 *UL.L*) to the maximum position of the sensor (par. 10 *LE.L* configured as *SENDER*).

It is also possible to fix the point in which the controller will display 0 (however keeping the scale range between *LL.L* and *UL.L*) using the "virtual zero" option by selecting *UDSET* on par. 10 *LE.L*. Selecting *UDSET* the virtual zero must be reset at each switching on; selecting *UDSET* the virtual zero will remain fixed once calibrated. To use the LATCH ON function, configure the par. *LE.L*¹

Then refer to the following table for the calibration procedure:

	Press	Display	Do
1	FNC	Exit parameters configuration. Display 2 visualizes writing <i>LRt.c</i> .	Place the sensor on minimum operating value (corresponding to <i>LL.L</i> .)
2	▼	Store value on minimum. Display shows <i>LoU</i> .	Place sensor on maximum operating value (corresponding to <i>UL.L</i> .)
3	▲	Store value on max. Display shows <i>HiU</i> .	To exit standard proceeding press SET . For "virtual zero" setting, place the sensor to zero point.
4	FNC	Set virtual zero. Display shows <i>ZERO</i> . If "Virtual zero at start" is selected, point 4 must be repeated at each starting.	To exit procedure press SET .

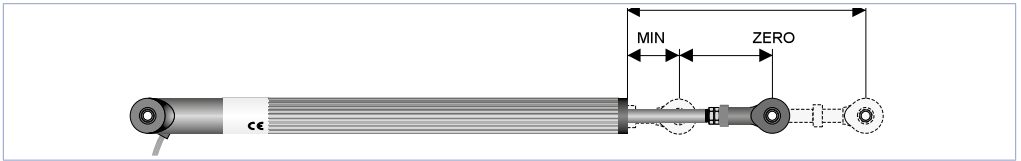

7.8 Soft-Start Function

The devices is provided with two types of softstart selectable on parameter 264 *SS.T* ("Softstart Type").

- 1 First selection** (*GRAD*) enables gradient softstart. At starting the controller reaches setpoint basing on the rising gradient set on parameter 266 *SS.GR* ("Softstart Gradient") in Unit/hour (ex. °C/h). If parameter 269 *SS.T* ("Softstart Time") is different to 0, at starting when the time selected on par. 269 is elapsed, the controller stops to follow the gradient and reaches setpoint with the maximum power.
- 2 Second selection** (*PERC*) enables output percentage softstart. On par. 268 *SS.TH* it is possible to set the threshold under which starts the softstart ("Softstart Threshold"). On par. 267 *SS.PE* ("Softstart Percentage") an output percentage is selectable (from 0 to 100), which controller keeps until the process exceeds the threshold set on par. 268 or until the time in minutes set on par. 269 *SS.T* ("Softstart Time" word 2084).

If the Sof-Start function is active the automatic/manual Tuning function cannot be activated.

¹ The tuning procedure starts by exiting the configuration after changing the parameter.

8 Reading and configuration through NFC



Programmable
via RFID /NFC.
No wiring required!

The controller is supported by the App PROGRAMADOR-NFC-Plus: using an ANDROID smartphone with NFC connection it is possible to program the device without using a dedicated equipment. The App allows to read, set and backup all parameters which are stored into the internal memory of devices.

Procedure:

- Identify the position of the NFC antenna on the smartphone (usually central, behind the back cover) or to one of the sides in case of metal chassis. The antenna is placed on the frontal panel: between **Y** and **ENC** keys for the device and between **Y** and **ENC** keys for the controller.
- Make sure that the NFC sensor of the phone is enabled or that there are no metal materials between the phone and the device (ex. aluminium cover or with magnetic stand)
- It is useful to enable the system sounds on the smartphone, as the notification sound confirms that the device has correctly been detected.

The App interface is provided with four tabs: SCAN, DATA, WRITE, EXTRA.

Select the first tab "SCAN" to read data stored into the internal memory of the device; place the smartphone in contact with the controller frontal panel, making sure that the phone's antenna matched with that of the controller. Once detected the device, the App emits a notification sounds and proceeds with the model identification and the reading of the parameters.

The graphic interface shows the advancement and switches to the second tab "DATA". It is now possible to move the smartphone away from the controller to make the required modifications more easily.

The device parameters are divided into collapsible groups and are displayed with name, current value and reference index to the manual. Click on a row to open the setting screen of the related parameter with the detailed view of available options (in case of multiple choice parameters) or of the minimum/maximum/decimals limits (for numeric parameters), included the text description (as per section n. 11 of the user manual). Once selected the chosen value, the related row will be updated and underlined into the tab "DATA" (hold down the line to cancel modifications).

To download the new configuration on your device, select the third tab "WRITE", place again the smartphone in contact with the controller and wait for the notification.

The devices will show a restart request, necessary to update the configuration with the new written modifications; if it does not restart, the controller will continue to work with the previous configuration.

In addition to the classic operation of parameters reading->modification->writing, MyPixsys is provided with additional functions which can be accessed by the tab "EXTRA", as save parameters / e-mail loaded values/ restore default values.

8.1 Configuration through memory card

The device can be configured through a memory card (2100.30.013). This one is linked to the micro-USB connector on the bottom of the device.

8.2 Memory card creation/update



In order to save a parameter configuration in the memory card, connect it to micro-USB connector and power the instrument. If the memory has never been configured, the device starts normally, but if its data are considered valid, it is possible to view on the display **MEMO 51.1P**. Press **SET** in order to start the product without uploading any data from the memory card. Configure, set the parameters and exit configuration. Now, the device saves the configuration just created also in the memory.

8.3 Configuration loading from memory card



In order to charge a configuration previously created and saved in the memory card, connect it to the micro-USB connector and power the instrument. Now, if the memory is detected and its data are considered valid, it is possible to view on the display *MEMO* *SlIP*. By pressing **▲** you see *MEMO Load* and with **SET** you confirm the uploading of parameters from the memory card to the controller. If, on the other hand, you press directly **SET**, when viewing *MEMO SlIP*, the product starts without uploading any data from the memory card.

9 Loading default values

This procedure allows to restore factory settings of the device.

	Press	Display	Do
1	FNC for 3 sec	Display 1 shows <i>PASS.</i> , while display 2 shows 0000 with the 1st digit flashing.	
2	▲ or ▼	Modify the flashing digit And move to the next one pressing SET .	Enter password 9999.
3	FNC to confirm	The device loads default settings and restarts.	

10 Access configuration

	Press	Display	Do
1	FNC for 3 sec.	Display 1 shows <i>PASS.</i> , while display 2 shows 0000 with the 1st digit flashing.	
2	▼ ▲	Modify flashing digit and move to next digit with SET .	Enter password 1234.
3	FNC to confirm	Display 1 shows the first parameters group, display 2 shows the description.	
4	▲ or ▼	Scroll parameters groups.	
5	SET to confirm	Display 1 shows the first parameter of the group and display 2 shows its value.	Press FNC to exit configuration.
6	▲ or ▼	Scroll parameters.	
7	SET to confirm	Allows parameter modification (display 2 flashes)	
8	▲ or ▼	Increases or decreases visualized value ▲▼	Introduce new data
9	SET	Confirms and stores the new value. If the value is different from default values, the arrow keys light on.	
10	FNC	Backs to parameter groups selection (see point 3).	Press again FNC to exit configuration

10.1 Parameters list functioning

The controller integrates many features that make the configuration parameters list very long. To make it more functional, the parameters list is dynamics and it changes as the user enables / disables the functions. Practically, using a specific function that occupies a given input (or output), the parameters referred to other functions of that resource are hidden to the user making the parameters list more concise. To simplify the reading/interpretation of the parameters, pressing **SET** it is possible to visualize a brief description of the selected parameter.

Finally, keeping pressed **FNC**, it is possible to move from the mnemonic visualization of the parameter to the numeric one, and vice versa. Ex. The first parameter can be displayed as *SEN.1* (mnemonic visualization) or as *P.001* (numeric visualization).

Set the product parameters so that they are suitable for the system to be controlled. If they are not suitable, unexpected operations may occasionally cause materials damage or accidents.

11 Table of configuration parameters

GROUP A - *Analogue* - Analogue input

1 *SEn.I* Sensor Ai

Analogue input configuration / sensor Ai selection

<i>tc.K</i>	Tc-K	-260° C..1360° C. (Default)
<i>tc.S</i>	Tc-S	-40° C..1760° C
<i>tc.R</i>	Tc-R	-40° C..1760° C
<i>tc.J</i>	Tc-J	-200° C..1200° C
<i>tc.T</i>	Tc-T	-260° C..400° C
<i>tc.E</i>	Tc-E	-260° C..980° C
<i>tc.N</i>	Tc-N	-260° C..1280° C
<i>tc.b</i>	Tc-B	100° C..1820° C
<i>Pt100</i>	Pt100	-200° C..600° C
<i>Ni100</i>	Ni100	-60° C..180° C
<i>Ntc 1</i>	NTC 10K β 3435K	-40° C..125° C
<i>Ptc</i>	PTC 1K	-50° C..150° C
<i>Pt500</i>	Pt500	-200° C..600° C
<i>Pt1k</i>	Pt1000	-200° C..600° C
<i>0.1</i>	0..1 V	
<i>0.5</i>	0..5 V	
<i>0.10</i>	0..10 V	
<i>0.20</i>	0..20 mA	
<i>4.20</i>	4..20 mA	
<i>0.60</i>	0..60 mV	
<i>Pot.</i>	Potentiometer (set the value on parameter 6)	
<i>Ni120</i>	Ni120	-60° C..240° C
<i>Ntc 2</i>	NTC 10K β 3694K	-40° C..150° C
<i>Ntc 3</i>	NTC 2252 β 3976K	-40° C..150° C

2 *dP. I* Decimal Point

Select number of displayed decimal points for Ai

<i>0</i>	Default	<i>0.0</i>	1 decimal
<i>0.00</i>	2 decimals	<i>0.000</i>	3 decimals

3 *dEGr.* Degree

<i>°C</i>	Celsius (Default)		
<i>°F</i>	Fahrenheit	<i>K</i>	Kelvin

4 *LL.L.I* Lower Linear Input Ai

Ai lower limit only for linear signals. Ex.: with input 4..20 mA this parameter takes value associated to 4 mA. The value may be greater than the one entered on the next parameter.

-9999..+9999 [digit^{1/p.22}] Default: 0.

5 *UL.L.I* Upper Linear Input Ai

Ai upper limit only for linear signals Ex: with input 4..20 mA this parameter takes value associated to 20 mA. The value may be lower than the one entered on the previous parameter.

-9999..+9999 [digit^{1/p.22}] Default:1000

6 *PuR.I* Potentiometer Value Ai

Selects the value of the potentiometer connected on Ai

1..150 kohm. Default: 10kohm

7 *i.o.L.I* Linear Input over Limits Ai

If Ai is a linear input, allows to the process to overpass the limits (parameters 4 and 5).

<i>dSRb.</i>	Disabled (Default)
<i>ENRb.</i>	Enabled

- 8** **o.cR.I** **Offset Calibration Ai**
 Ai Offset calibration. Value added/subtracted to the process value (ex: usually correcting the ambient temperature value).
 -9999..+9999 [digit^{1p.22}] (degrees.tenths for temperature sensors). **Default** 0.
- 9** **o.cR.I** **Gain Calibration Ai**
 Value multiplied to the process value to calibrate the working point. Ex: to correct the range from 0..1000°C showing 0..1010°C, set the parameter to -1.0
 -100.0%...+100.0%, **Default:** 0.0.
- 10** **L.c.I** **Latch-On Ai**
 Automatic setting of limits for Ai linear input
 d.SRb. Disabled (**Default**)
 S.bMRd Standard
 V.0.S.b. Virtual Zero Stored
 V.0.b.bN. Virtual Zero at start
- 11** **c.FL.I** **Conversion Filter Ai**
 ADC Filter: Number of sensor readings to calculate mean that defines process value. **NB:** When readings increase, control loop speed slows down. 1...15. (**Default:** 10)
- 12** **c.Fr.I** **Conversion Frequency Ai**
 Sampling frequency of digital / analogue converter for Ai Increasing the conversion speed will slow down reading stability
 (example: for fast transients, as the pressure, it is advisable to increase sampling frequency).
- | | | | |
|---------|--|--------|--------------------------------|
| 4.17.HZ | 4.17 Hz (Min. conversion speed) | 33.2HZ | 33.2 Hz |
| 6.25HZ | 6.25 Hz | 39.0HZ | 39.0 Hz |
| 8.33HZ | 8.33 Hz | 50.0HZ | 50.0 Hz |
| 10.0HZ | 10.0 Hz | 62.0HZ | 62.0 Hz |
| 12.5HZ | 12.5 Hz | 123HZ | 123 Hz |
| 16.7HZ | 16.7 Hz (Default) Ideal for noises filtering 50 / 60 Hz | 242HZ | 242 Hz |
| 19.6HZ | 19.6 Hz | 470HZ | 470 Hz (Max. speed conversion) |
- 13** **L.c.E.I** **Lower Current Error**
 If Ai is a 4-20 mA input, it determines the current value below the probe error E-05 is signaled.
- | | | | | |
|--------|--------------------|--------|--------|--------|
| 2.0 mA | (Default) | 2.6 mA | 3.2 mA | 3.8 mA |
| 2.2 mA | | 2.8 mA | 3.4 mA | |
| 2.4 mA | | 3.0 mA | 3.6 mA | |

GROUP C - c.PI.I - Outputs and regulation Process

- 35** **c.o.u.I** **Command Output**
 Selects the command output related to the process and the outputs related to the alarms.
- c. o2 Command on relay output Q2.
 c. o1 Command on relay output Q1. (**Default**)
 c. SSR Command on digital output

	Command	AL. 1	AL. 2
c. o2	Q2	Q1	DO1
c. o1	Q1	Q2	DO1
c. SSR	DO1	Q1	Q2

- 38** **A.c.b.I** **Action type**
 Action type to control process
 HEAt Heating (N.A.) (**Default**)
 cooL Cooling (N.C.)

Hysteresis to control process in ON/OFF.

1993, 1994, 1995, 1996, 1997, 1998, 1999, 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018, 2019, 2020, 2021, 2022, 2023, 2024, 2025, 2026, 2027, 2028, 2029, 2030, 2031, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2043, 2044, 2045, 2046, 2047, 2048, 2049, 2050, 2051, 2052, 2053, 2054, 2055, 2056, 2057, 2058, 2059, 2060, 2061, 2062, 2063, 2064, 2065, 2066, 2067, 2068, 2069, 2070, 2071, 2072, 2073, 2074, 2075, 2076, 2077, 2078, 2079, 2080, 2081, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2092, 2093, 2094, 2095, 2096, 2097, 2098, 2099, 2100, 2101, 2102, 2103, 2104, 2105, 2106, 2107, 2108, 2109, 2110, 2111, 2112, 2113, 2114, 2115, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2124, 2125, 2126, 2127, 2128, 2129, 2130, 2131, 2132, 2133, 2134, 2135, 2136, 2137, 2138, 2139, 2140, 2141, 2142, 2143, 2144, 2145, 2146, 2147, 2148, 2149, 2150, 2151, 2152, 2153, 2154, 2155, 2156, 2157, 2158, 2159, 2160, 2161, 2162, 2163, 2164, 2165, 2166, 2167, 2168, 2169, 2170, 2171, 2172, 2173, 2174, 2175, 2176, 2177, 2178, 2179, 2180, 2181, 2182, 2183, 2184, 2185, 2186, 2187, 2188, 2189, 2190, 2191, 2192, 2193, 2194, 2195, 2196, 2197, 2198, 2199, 2200, 2201, 2202, 2203, 2204, 2205, 2206, 2207, 2208, 2209, 2210, 2211, 2212, 2213, 2214, 2215, 2216, 2217, 2218, 2219, 2220, 2221, 2222, 2223, 2224, 2225, 2226, 2227, 2228, 2229, 2230, 2231, 2232, 2233, 2234, 2235, 2236, 2237, 2238, 2239, 2240, 2241, 2242, 2243, 2244, 2245, 2246, 2247, 2248, 2249, 2250, 2251, 2252, 2253, 2254, 2255, 2256, 2257, 2258, 2259, 2260, 2261, 2262, 2263, 2264, 2265, 2266, 2267, 2268, 2269, 2270, 2271, 2272, 2273, 2274, 2275, 2276, 2277, 2278, 2279, 2280, 2281, 2282, 2283, 2284, 2285, 2286, 2287, 2288, 2289, 2290, 2291, 2292, 2293, 2294, 2295, 2296, 2297, 2298, 2299, 2300, 2301, 2302, 2303, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2312, 2313, 2314, 2315, 2316, 2317, 2318, 2319, 2320, 2321, 2322, 2323, 2324, 2325, 2326, 2327, 2328, 2329, 2330, 2331, 2332, 2333, 2334, 2335, 2336, 2337, 2338, 2339, 2340, 2341, 2342, 2343, 2344, 2345, 2346, 2347, 2348, 2349, 2350, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2360, 2361, 2362, 2363, 2364, 2365, 2366, 2367, 2368, 2369, 2370, 2371, 2372, 2373, 2374, 2375, 2376, 2377, 2378, 2379, 2380, 2381, 2382, 2383, 2384, 2385, 2386, 2387, 2388, 2389, 2390, 2391, 2392, 2393, 2394, 2395, 2396, 2397, 2398, 2399, 2400, 2401, 2402, 2403, 2404, 2405, 2406, 2407, 2408, 2409, 2410, 2411, 2412, 2413, 2414, 2415, 2416, 2417, 2418, 2419, 2420, 2421, 2422, 2423, 2424, 2425, 2426, 2427, 2428, 2429, 2430, 2431, 2432, 2433, 2434, 2435, 2436, 2437, 2438, 2439, 2440, 2441, 2442, 2443, 2444, 2445, 2446, 2447, 2448, 2449, 2450, 2451, 2452, 2453, 2454, 2455, 2456, 2457, 2458, 2459, 2460, 2461, 2462, 2463, 2464, 2465, 2466, 2467, 2468, 2469, 2470, 2471, 2472, 2473, 2474, 2475, 2476, 2477, 2478, 2479, 2480, 2481, 2482, 2483, 2484, 2485, 2486, 2487, 2488, 2489, 2490, 2491, 2492, 2493, 2494, 2495, 2496, 2497, 2498, 2499, 2500, 2501, 2502, 2503, 2504, 2505, 2506, 2507, 2508, 2509, 2510, 2511, 2512, 2513, 2514, 2515, 2516, 2517, 2518, 2519, 2520, 2521, 2522, 2523, 2524, 2525, 2526, 2527, 2528, 2529, 2530, 2531, 2532, 2533, 2534, 2535, 2536, 2537, 2538, 2539, 2540, 2541, 2542, 2543, 2544, 2545, 2546, 2547, 2548, 2549, 2550, 2551, 2552, 2553, 2554, 2555, 2556, 2557, 2558, 2559, 2560, 2561, 2562, 2563, 2564, 2565, 2566, 2567, 2568, 2569, 2570, 2571, 2572, 2573, 2574, 2575, 2576, 2577, 2578, 2579, 2580, 2581, 2582, 2583, 2584, 2585, 2586, 2587, 2588, 2589, 2590, 2591, 2592, 2593, 2594, 2595, 2596, 2597, 2598, 2599, 2600, 2601, 2602, 2603, 2604, 2605, 2606, 2607, 2608, 2609, 2610, 2611, 2612, 2613, 2614, 2615, 2616, 2617, 2618, 2619, 2620, 2621, 2622, 2623, 2624, 2625, 2626, 2627, 2628, 2629, 2630, 2631, 2632, 2633, 2634, 2635, 2636, 2637, 2638, 2639, 2640, 2641, 2642, 2643, 2644, 2645, 2646, 2647, 2648, 2649, 2650, 2651, 2652, 2653, 2654, 2655, 2656, 2657, 2658, 2659, 2660, 2661, 2662, 2663, 2664, 2665, 2666, 2667, 2668, 2669, 2670, 2671, 2672, 2673, 2674, 26

Lower limit setpoint selectable for command setpoint .

Upper limit setpoint selectable for command setpoint.

Type of reset for command contact (always automatic in P.I.D. functioning)

M. RES. Manual Reset (by keyboard or by digital input)

R.RES.E. Automatic reset with timed activation. The command remains active for 1

State of contact for command output in case of error.

aPEN Contact or valve open. **Default**

If the command output is digital c

OFF	Digital output OFF. Default	ON	Digital output ON.
------------	------------------------------------	-----------	--------------------

Defines led C1 state corresponding to the relevant output.

E.F. ON with closed contact or SSR switched on

1997, 1998, 1999, 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018, 2019, 2020, 2021, 2022, 2023, 2024, 2025, 2026, 2027, 2028, 2029, 2030, 2031, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2043, 2044, 2045, 2046, 2047, 2048, 2049, 2050, 2051, 2052, 2053, 2054, 2055, 2056, 2057, 2058, 2059, 2060, 2061, 2062, 2063, 2064, 2065, 2066, 2067, 2068, 2069, 2070, 2071, 2072, 2073, 2074, 2075, 2076, 2077, 2078, 2079, 2080, 2081, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2092, 2093, 2094, 2095, 2096, 2097, 2098, 2099, 2100, 2101, 2102, 2103, 2104, 2105, 2106, 2107, 2108, 2109, 2110, 2111, 2112, 2113, 2114, 2115, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2124, 2125, 2126, 2127, 2128, 2129, 2130, 2131, 2132, 2133, 2134, 2135, 2136, 2137, 2138, 2139, 2140, 2141, 2142, 2143, 2144, 2145, 2146, 2147, 2148, 2149, 2150, 2151, 2152, 2153, 2154, 2155, 2156, 2157, 2158, 2159, 2160, 2161, 2162, 2163, 2164, 2165, 2166, 2167, 2168, 2169, 2170, 2171, 2172, 2173, 2174, 2175, 2176, 2177, 2178, 2179, 2180, 2181, 2182, 2183, 2184, 2185, 2186, 2187, 2188, 2189, 2190, 2191, 2192, 2193, 2194, 2195, 2196, 2197, 2198, 2199, 2200, 2201, 2202, 2203, 2204, 2205, 2206, 2207, 2208, 2209, 2210, 2211, 2212, 2213, 2214, 2215, 2216, 2217, 2218, 2219, 2220, 2221, 2222, 2223, 2224, 2225, 2226, 2227, 2228, 2229, 2230, 2231, 2232, 2233, 2234, 2235, 2236, 2237, 2238, 2239, 2240, 2241, 2242, 2243, 2244, 2245, 2246, 2247, 2248, 2249, 2250, 2251, 2252, 2253, 2254, 2255, 2256, 2257, 2258, 2259, 2260, 2261, 2262, 2263, 2264, 2265, 2266, 2267, 2268, 2269, 2270, 2271, 2272, 2273, 2274, 2275, 2276, 2277, 2278, 2279, 2280, 2281, 2282, 2283, 2284, 2285, 2286, 2287, 2288, 2289, 2290, 2291, 2292, 2293, 2294, 2295, 2296, 2297, 2298, 2299, 2300, 2301, 2302, 2303, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2312, 2313, 2314, 2315, 2316, 2317, 2318, 2319, 2320, 2321, 2322, 2323, 2324, 2325, 2326, 2327, 2328, 2329, 2330, 2331, 2332, 2333, 2334, 2335, 2336, 2337, 2338, 2339, 2340, 2341, 2342, 2343, 2344, 2345, 2346, 2347, 2348, 2349, 2350, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2360, 2361, 2362, 2363, 2364, 2365, 2366, 2367, 2368, 2369, 2370, 2371, 2372, 2373, 2374, 2375, 2376, 2377, 2378, 2379, 2380, 2381, 2382, 2383, 2384, 2385, 2386, 2387, 2388, 2389, 2390, 2391, 2392, 2393, 2394, 2395, 2396, 2397, 2398, 2399, 2400, 2401, 2402, 2403, 2404, 2405, 2406, 2407, 2408, 2409, 2410, 2411, 2412, 2413, 2414, 2415, 2416, 2417, 2418, 2419, 2420, 2421, 2422, 2423, 2424, 2425, 2426, 2427, 2428, 2429, 2430, 2431, 2432, 2433, 2434, 2435, 2436, 2437, 2438, 2439, 2440, 2441, 2442, 2443, 2444, 2445, 2446, 2447, 2448, 2449, 2450, 2451, 2452, 2453, 2454, 2455, 2456, 2457, 2458, 2459, 2460, 2461, 2462, 2463, 2464, 2465, 2466, 2467, 2468, 2469, 2470, 2471, 2472, 2473, 2474, 2475, 2476, 2477, 2478, 2479, 2480, 2481, 2482, 2483, 2484, 2485, 2486, 2487, 2488, 2489, 2490, 2491, 2492, 2493, 2494, 2495, 2496, 2497, 2498, 2499, 2500, 2501, 2502, 2503, 2504, 2505, 2506, 2507, 2508, 2509, 2510, 2511, 2512, 2513, 2514, 2515, 2516, 2517, 2518, 2519, 2520, 2521, 2522, 2523, 2524, 2525, 2526, 2527, 2528, 2529, 2530, 2531, 2532, 2533, 2534, 2535, 2536, 2537, 2538, 2539, 2540, 2541, 2542, 2543, 2544, 2545, 2546, 2547, 2548, 2549, 2550, 2551, 2552, 2553, 2554, 2555, 2556, 2557, 2558, 2559, 2560, 2561, 2562, 2563, 2564, 2565, 2566, 2567, 2568, 2569, 2570, 2571, 2572, 2573, 2574, 2575, 2576, 2577, 2578, 2579, 2580, 2581, 2582, 2583, 2584, 2585, 2586, 2587, 2588, 2589, 2590, 2591, 2592, 2593, 2594, 2595, 2596, 2597, 2598, 2599, 2600, 2601, 2602, 2603, 2604, 2605, 2606, 2607, 2608, 2609, 2610, 2611, 2612, 2613, 2614, 2615, 2616, 2617, 2618, 2619, 2620, 2621, 2622, 2623, 2624, 2625, 2626, 2627, 2628, 2629, 2630, 2631, 2632, 2633, 2634, 2635, 2636, 2637, 2638, 2639, 2640, 2641, 2642, 2643, 2644, 2645, 2646, 2647, 2648, 2649, 2650, 2651, 2652, 2653, 2654, 2655, 2656, 2657, 2658, 2659, 2660, 2661, 2662, 2663, 2664, 2665, 2666, 2667, 2668, 2669, 2670, 2671, 2672, 2673, 2674, 2675, 2676, 2677, 2678, 26

Command delay (only in ON / OFF functioning).

Negative: delay when turning off ou

Allows or not to modify command setpoint value

Lock Protected

Enables the automatic/manual selection for command 1

<i>ENAB.</i>	Enabled	<i>EN.5to.</i>	Enabled with memory
--------------	---------	----------------	---------------------

EXCELLENCE IN SERVICE WITH INTEGRITY

Choose the state of the controller when turning it on. This only works on the RS 485 version or by enabling the Start/Stop from digital input or **SET** button.

STOP Stop

STORE Stored. State of Start/Stop prior to switching off.

222-21: stored state of start/stop prior to switching on.

51 *SP.1* Initial Value Setpoint

Determines the initial value (at start) of setpoint of command when *FR.M.* is selected on parameter 46 *c.5.P.1* (Command Setpoint Protection)
-9999..+9999 [digit^{1p.22}] (degrees for temperature sensors). **Default** 0.

GROUP E - *rEE.1* - Autotuning and PID

73 *tun.1* Tune 1

Selects autotuning type for command 1

d5Rb. Disabled. If proportional band and integral time paramters are to selected to zero, the regulation is ON/OFF type.. **(Default)**

R_{ult0}	Automatic (Automatic P.I.D. parameters calculation)
------------	---

MANU. Manual (launch by keyboards or by digital input)

Once (P.I.D. parameters calculation only at first start)

74 S.d.t.1 Setpoint Deviation Tune

Selects deviation from command setpoint1 as threshold used by autotuning to calculate P.I.D. parameters

0-10000 [digit^{1p.22}] (degrees.tenths for temp. sensors). **Default:** 30.0.

75 P.b. 1 Proportional Band

Proportional band or process P.I.D. regulation (Process inertia).

0 ON / OFF if t_{r} equal to 0 (Default)

1...10000 [digit^{1p.22}] (degrees.tenths for temp. sensors).

76 1.1. Integral Time

Integral time for process P.I.D. regulation (process inertia duration).

0.0...2000.0 sec. (0.0 = integral disabled), **Default** 0.0

77 *d.t. 1* **Derivative Time**

Derivative time for process P.I.D. regulation (Normally $\frac{1}{4}$ of integral time).

0.0...1000.0 sec. (0.0 = derivative disabled). **Default 0**

78 *d.b. |* **Dead Band**

Dead band of process P.I.D.. 0...10000 [digit^{1p.22}] (degrees.tenths for temp. sensors) (**Default: 0**)79 *P.b.c.1* Proportional Band Centered

Defines if the proportional band must be centered or not on the setpoint. In double loop functioning (heating/cooling), always disabled.

d15Ab. Disabled. Band under (heating) or over (cooling)(Default)

ENRb. Centered band

80 0.0.5.1 Off Over Setpoint

In P.I.D. enables the command output switching off, when a certain threshold is exceeded (setpoint + Par.81)

<i>d15Ab.</i>	Disabled (Default)	Enab.	Enabled
---------------	-----------------------------	-------	---------

81 *a.d.t.l* Off Deviation Threshold

Selects deviation from command setpoint 1, to calculate the intervention threshold of "Off Over Setpoint 1" function.

-9999...+9999 [digit^{1p.22}] (degrees.tenths for temp. sensors) (Default: 0)

82 c.t. / Cycle Time

Cycle time for P.I.D. regulation of process 1 (for P.I.D. on remote control switch 15 s; for PID on SSR 2s). For valve refer to parameter 47 μ P.A.E.

1-300 seconds (**Default:15 s**)

87 *LLP1* Lower Limit Output Percentage

Selects min. value for command output 1 percentage.

0%...100%, Default: 0%.

- 88** *uL.P.I* **Upper Limit Output Percentage**
Selects max. value for command output percentage.
0%...100%, **Default:** 100%.
- 89** *Π.Δ.Ε.1* **Max Gap Tune**
Selects the max. process-setpoint gap beyond which the automatic tune recalculates PID parameters of process.
0-10000 [digit^{1p.22}] (degrees.tenths for temp. sensors). **Default:** 2.0
- 90** *Πn.P.I* **Minimum Proportional Band**
Selects the min. proportional band value selectable by the automatic tune for the P.I.D. regulation of process.
0-10000 [digit^{1p.22}] (degrees.tenths for temp. sensors). **Default:** 3.0
- 91** *ΠR.P.I* **Maximum Proportional Band**
Selects the max. proportional band 1 value selectable by the automatic tune for the P.I.D. regulation of process.
0-10000 [digit^{1p.22}] (degrees.tenths for temp. sensors). **Default:** 80.0
- 92** *Πn.i.1* **Minimum Integral Time**
Selects the min. integral time 1 value selectable by the automatic tune for the P.I.D. regulation of process.
0.0...1000.0 seconds. **Default:** 30.0 s.
- 93** *o.c.L.I* **Overshoot Control Level**
The overshoot control function prevents this event during device switching on or when the setpoint is modified.
Setting a too low value the overshoot may not be fully absorbed, while with high values the process could reach the setpoint more slowly.
- | | | | |
|--------|---------------------------|--------|---------|
| Disab. | Lev.3 | Lev. 6 | Lev. 9 |
| Lev.1 | Lev. 4 | Lev. 7 | Lev. 10 |
| Lev2 | Lev. 5 (Default) | Lev. 8 | |

GROUP G - *AL* 1 - Alarm 1

- 123** *AL.I.F.* **Alarm 1 Function**
Alarm1 selection.
- | | |
|-----------------|---|
| <i>d.SAb.</i> | Disabled (Default) |
| <i>Ab.uP.R.</i> | Absolute Upper Activation. Absolute referred to the process, active over |
| <i>Ab.La.R.</i> | Absolute Lower Activation. Absolute referred to the process, active under |
| <i>bRNd</i> | Band alarm (command setpoint ± alarm setpoint) |
| <i>uP.dEv.</i> | Upper Deviation alarm |
| <i>Lo.dEv.</i> | Lower Deviation alarm |
- 126** *Al.S.o.* **Alarm 1 State Output**
Alarm1 output contact and intervention type.
- | | |
|------------------|--|
| <i>N.o. SE.</i> | (N.O. Start) Normally open, active at start (Default) |
| <i>N.c. SE.</i> | (N.C. Start) Normally closed, active at start |
| <i>N.o. EH.</i> | (N.O. Threshold) Normally open, active on reaching alarm ^{2p.22} |
| <i>N.c. EH.</i> | (N.C. Threshold) Normally closed, active on reaching alarm ^{2p.22} |
| <i>N.o.EH.V.</i> | (N.O. Threshold Variation) disabled after changing control setpoint ^{3p.22} |
| <i>N.c.EH.V.</i> | (N.C. Threshold Variation) disabled after changing control setpoint ^{3p.22} |
- 128** *Al.HY.* **Alarm 1 Hysteresis**
Alarm1 hysteresis
-9999..+9999 [digit^{1p.22}] (degrees for temp. sensors). **Default** 0.5.

129 *RL.L.* Alarm 1 Lower Limit

Lower limit selectable for the alarm 1 setpoint.

-9999..+9999 [digit^{1/p.22}] (degrees for temp. sensors). **Default** 0.

130 *RL.U.* Alarm 1 Upper Limit

Upper limit selectable for the alarm 1 setpoint

-9999..+9999 [digit^{1/p.22}] (degrees for temp. sensors). **Default** 1750

131 *RLrE.* Alarm 1 Reset

Alarm 1 contact reset type (always automatic if *RL.i.F.* = *c.* *RLu*).

R. *RES.* Automatic reset (**Default**)

M. *RES.* Manual reset (manual reset by keyboard or by digital input)

M.RES. *S.* Stored manual reset (keeps the output status also after a power failure)

R. *RES.* *E.* Automatic reset with timed activation. The alarm remains active for the time set on the parameter 134 *RL.dE.*, even if the conditions generating it are missing. To be able to act again, the alarm conditions must disappear.

132 *RLSE.* Alarm 1 State Error

Alarm 1 output status in case of error.

oPEN Open contact. **Default**

cLoSE Closed contact.

133 *RLd.* Alarm 1 Led

Defines the status of the led **A1** in correspondence of the relevant output

o.c. ON with open contact or DO switched off.

c.c. ON with closed contact or DO switched on. (**Default**)

134 *RLdE.* Alarm 1 Delay

Alarm 1 Delay.

-60.00 .. 60.00 mm:ss (hh:mm if *RL.i.F.* = *c.* *RLu*).

Default: 00.00.

Negative value: delay when exit alarm status.

Positive value: delay when enter alarm status.

135 *RLSP.* Alarm 1 Setpoint Protection

Allows or not to change the alarm 1 setpoint

FREE Editable by the user (**Default**)

Lock Protected

Hide Protected and not visualized

136 *RLb.* Alarm 1 Label

Selects the message displayed in case of alarm 1 intervention.

disAb. Disabled. (**Default**) 0.

Lb. 01 Message 1 (see table on paragraph 14.1)

..

Lb. 16 Message 16 (see table on paragraph 14.1)

USER.L. Custom message (modifiable by the user through the App or via modbus)

GROUP H - *RL.2* - Alarm 2

141 *RL2F.* Alarm 2 Function

Alarm 2 selection.

disAb. Disabled (**Default**)

Ab.uP.R. Absolute Upper Activation. Absolute referred to the process, active over

Ab.Lo.R. Absolute Lower Activation. Absolute referred to the process, active under

band Band alarm (command setpoint ± alarm setpoint)

uP.dEv. Upper Deviation alarm

Lo.dEv. Lower Deviation alarm

144 **A25.o.** Alarm 2 State Output

Alarm2 output contact and intervention type.

N.o. **5t.** (N.O. Start) Normally open, active at start (**Default**)

N.c. **5t.** (N.C. Start) Normally closed, active at start

N.o. **th.** (N.O. Threshold) Normally open, active on reaching alarm^{2 p. 22}

N.c. **th.** (N.C. Threshold) Normally closed, active on reaching alarm^{2 p. 22}

N.o. **th.v.** (N.O. Threshold Variation) disabled after changing control setpoint^{3 p. 22}

N.c. **th.v.** (N.C. Threshold Variation) disabled after changing control setpoint^{3 p. 22}

146 **A2HY.** Alarm 2 Hysteresis

Alarm2 hysteresis

-9999.. + 9999 [digit^{1 p. 22}] (degrees for temp. sensors). **Default** 0.5.

147 **A2LL.** Alarm 2 Lower Limit

Lower limit selectable for the alarm 2 setpoint.

-9999.. + 9999 [digit^{1 p. 22}] (degrees for temp. sensors). **Default** 0

148 **A2UL.** Alarm 2 Upper Limit

Upper limit selectable for the alarm 2 setpoint

-9999.. + 9999 [digit^{1 p. 22}] (degrees for temp. sensors). **Default** 1750

149 **A2rE.** Alarm 2 Reset

Alarm 2 contact reset type (always automatic if **RL.z.F.** = **c.** **RU***).

R. **RES.** Automatic reset (**Default**)

M. **RES.** Manual reset (manual reset by keyboard or by digital input)

M. **RES.** **S.** Stored manual reset (keeps the output status also after a power failure)

R. **RES.** **t.** Automatic reset with timed activation. The alarm remains active for the time set on the parameter 152 **R.z.dE.**, even if the conditions generating it are missing. To be able to act again, the alarm conditions must disappear.

150 **A25.E.** Alarm 2 State Error

Alarm 2 output status in case of error

If the alarm output is relay

aPEN Contact or open valve. **Default**

cLoSE Contact or closed valve.

If the alarm output is digital (SSR):

aFF Digital output OFF. **Default**

aH Digital output ON.

151 **A2Ld.** Alarm 2 Led

Defines the status of the led **A2** in correspondence of the relevant output.

a.c. ON with open contact or DO switched off.

c.c. ON with closed contact or DO switched on. (**Default**)

152 **A2dE.** Alarm 2 Delay

Alarm 2 Delay. -60.00.. + 60.00 mm:ss (hh:mm if **RL.z.F.** = **c.** **RU***). **Default**: 00.00.

Negative value: delay when exit alarm status.

Positive value: delay when enter alarm status

153 **A25.P.** Alarm 2 Setpoint Protection

Allows or not to change the alarm setpoint

FPRE Editable by the user (**Default**)

LoCK Protected

HiDE Protected and not visualized

154 *A2Lb.* Alarm 2 Label

Selects the message displayed in case of alarm 2 intervention.

d.SRb. Disabled. **(Default)** 0.

Lb. 01 Message 1 (see table on paragraph 14.1)

...

Lb. 20 Message 20 (see table on paragraph 14.1)

uSER.L. Custom message (modifiable by the user through the App or via modbus)

GROUP M - *d.i. 1* - Digital input 1

231 *d.i.1F.* Digital Input 1 Function

Digital input 1 functioning.

d.SRb. Disabled **(Default)**

2E. SM. 2 Setpoints Switch

Run Run

tune Performing manual tune

Auto.MR.i. Automatic / Manual Impulse (if enabled on parameter 48 or 67)

Auto.MR.c. Automatic / Manual Contact (if enabled on parameter 48 or 67)

Act.ty. Action Type. Cooling regulat. if D.I. is active, otherwise heating reg.

M. RES. Manual reset. Reset the outputs if selected as manual reset.

232 *d.i.1c.* Digital Input 1 Contact

Defines the resting contact of the digital input 1.

No.OPEN Normally open **(Default)**

No.cLoS. Normally closed

GROUP Q - *SS.t.S* - Soft-start and mini cycle

264 *SS.ty.* Soft-Start Type

Enables and selects the soft-start type

d.SRb. Disabled **(Default)**

GRAd. Gradient

PERc. Percentage (only with pre-programmed cycle disabled)

266 *SS.Gr.* Soft-Start Gradient

Rising/falling gradient for soft-start and pre-programmed cycle.

0..20000 Digit/hour^[p.<>] (degrees.tenths/hour if temperature). **(Default: 100.0)**

267 *SS.PE.* Soft-Start Percentage

Output percentage during soft-start function.

0..100% **(Default: 50%)**

268 *SS.tH.* Soft-Start Threshold

Threshold under which the soft-start percentage function is activated, at starting.

-9999...9999 [digit^[p.<>]] (degrees.tenths for temp. sensors) **(Default: 1000)**

269 *SS.t.i.* Soft-Start Time

Max. Softstart duration: if the process will not reach the threshold selected on par. SS.tH. within the selected time, the controller starts to regulate on setpoint.

00:00 Disabled

00:01-24:00 hh:mm **(Default: 00:15)**

GROUP R - *d.SP.* - Display and interface

277 *uFLt* Visualization Filter

d.SRb. Disabled

ptChf

Pitchfork filter **(Default)**

Fi.oPd. First Order

fi.or.p.

First Order with Pitchfork

2 SR.M. 2 Samples Mean

....

...n Samples Mean

10 SR.M. 10 Samples Mean

278 *u.i.d.2* **Visualization Display 2**
 Selects visualization on display 2.
c.i.SP.v Command 1 setpoint (**Default**)
au.PE.1 Percentage of command output 1

279 *t.no.d.* **Timeout Display**
 Determines the display timeout
d.SRb. Disabled. Display always ON (**Default**) *10M.N* 10 minutes
15 5 15 seconds *30M.N* 30 minutes
1 M.N 1 minute *1 H* 1 hour
5 M.N 5 minutes

280 *t.no.S.* **Timeout Selection**
 Selects which display is switched off when Display Timeout expires
d.SP.1 Display 1
d.SP.2 Display 2 (**Default**)
d.SP.1.2 Display 1 and 2
d.1.2.Ld. Display 1, 2 and led

282 *u.out* **Voltage Output**
 Selects the voltage on the sensors power terminals and of the digital outputs (SSR).
12 V 12 volt (**Default**) *24 V* 24 volt


283 *ScL.t.* **Scrolling Time**
 Select the duration for the visualization of the user menu data, before returning to the default page.
3 5 3 seconds *1 M.N* 1 minutes
5 5 5 seconds (**Default**) *5 M.N* 5 minutes
10 5 10 seconds *10M.N* 10 minutes
30 5 30 seconds *MAN.Sc.* Manual scroll

284 *d.SPF.* **Display Special Functions**
d.SRb. Special functions disabled
SWRP Shows the setpoint on display 1 and the process on display 2 (only if Par. 278 *u.i.d.2* set on *c.i.SP.u*)


285 *nFc.L.* **NFC Lock**
d.SRb. NFC lock disabled: NFC accessible. *ENRb.* NFC lock enabled: NFC not accessible

12 Alarm Intervention Modes

12.a Absolute or threshold alarm active over (par. 123 *AL.IF. = Ab.uPA*)

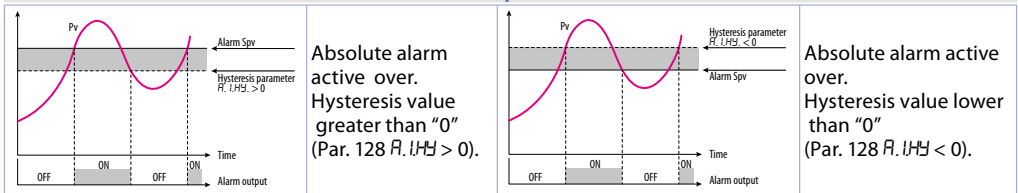


12.b Absolute or threshold alarm active below (par. 123 *AL.IF. = Ab.uPA*)

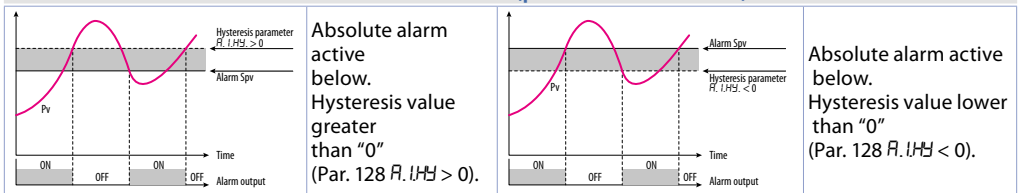


12.c Absolute or threshold alarm referred to command setpoint active over

(par. 123 ALIF = Ab.c.UA)

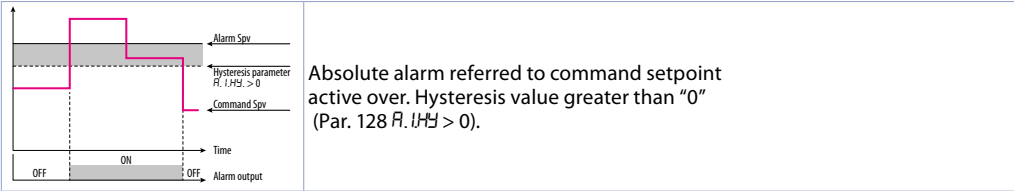


12.d Absolute or threshold alarm referred to command setpoint active below


(par. 123 ALIF = Ab.c.LA)

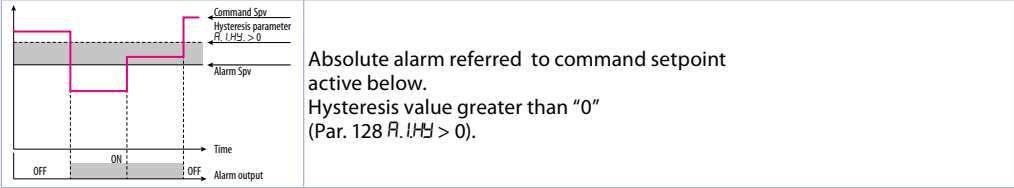


12.e Band alarm (par. 123 ALIF = bAnd)

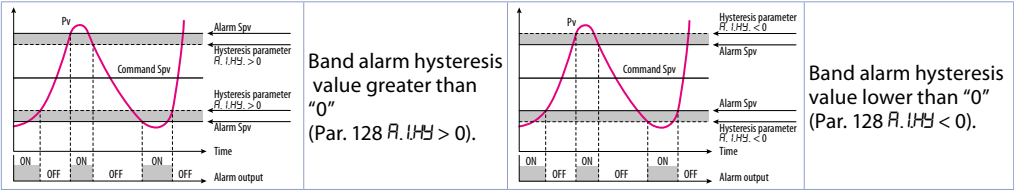


12.f Asymmetric band alarm (par. 123 ALIF = AbAnd)

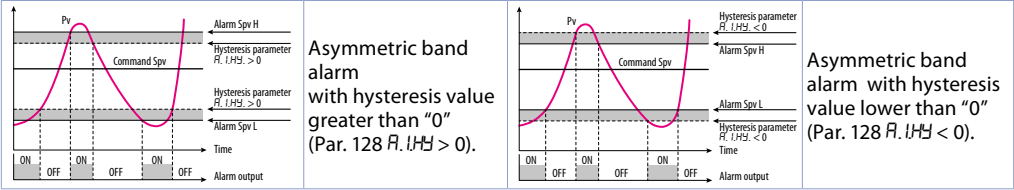

12.g Upper deviation alarm (par. 123 ALIF = uP.dEU)

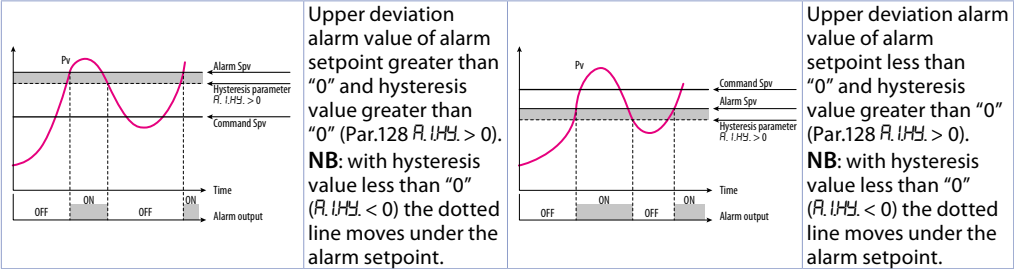

12.h Lower deviation alarm (par. 123 $R.L.F. = Lo.dEu$)

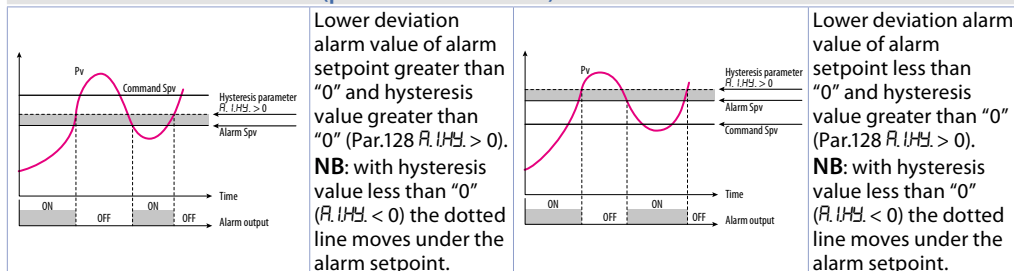

12.1 Alarms label

By setting a value from 1 to 20 on the parameters 136 $R.1.Lb.$ and 154 $R.2.Lb.$, the display 2 will show one of the following messages in case of alarm:

Selection	Message displayed in the alarm event
1...2	alarm 1 ... 2
7	open door
8	closed door
9	light on
10	light off
11	warning
12	waiting
13	high limit

Selection	Message displayed in the alarm event
4	low limit
5	external alarm
16	temperature alarm
17	pressure alarm
18	fan command
19	cooling
20	operating

By setting 0, no message will be displayed. While setting 21, the user will have up to 23 characters available to customize his message via the App or via modbus.

13 Table of Anomaly Signals

If installation malfunctions, the controller switches off the regulation output and reports the anomaly noticed. For example, controller will report failure of a connected thermocouple visualizing $E-05$ (flashing) flashing on display. For other signals see table below.

	Cause	What to do
$E-02$ SYSSEn Error	Cold junction temperature sensor failure or environment temperature out of range	Call assistance
$E-04$ EEPROM Error	Incorrect configuration data. Possible loss of instrument calibration	Verify that configuration parameters are correct.
$E-05$ Probe 1 Error	Sensor connected to AI1 broken or temperature out of range	Control connection with probes and their integrity.
$E-08$ SYSSEn Error	Missing calibration	Call assistance
$E-80$ rFid Error	Tag rfid malfunctioning	Call assistance

Notes / Updates

- Display of decimal point depends on setting of parameter $SEn.l$ and $d.P.l$
- On activation, the output is inhibited if the controller is in alarm mode. Activates only if alarm condition reappears, after that it was restored.
- Changing the control setpoint, the alarm will be disabled. It will stay disabled as long as the parameters that created it are active. It only works with deviation alarms, band alarms and absolute alarms (referring to the control setpoint).

Table of configuration parameters

GROUP A - *A.in.1* - Analogue input

1	<i>SEn.1</i>	Sensor Ai	12
2	<i>dP.1</i>	Decimal Point	12
3	<i>dEGr.</i>	Degree	12
4	<i>LL.i.1</i>	Lower Linear Input Ai	12
5	<i>uL.i.1</i>	Upper Linear Input Ai	12
6	<i>P.vA.1</i>	Potentiometer Value Ai	12
7	<i>LoL.1</i>	Linear Input over Limits Ai	12
8	<i>o.cA.1</i>	Offset Calibration Ai	13
9	<i>G.cA.1</i>	Gain Calibration Ai	13
10	<i>LtC.1</i>	Latch-On Ai	13
11	<i>cFL.1</i>	Conversion Filter Ai	13
12	<i>cFr.1</i>	Conversion Frequency Ai	13
13	<i>LcE.1</i>	Lower Current Error	13

GROUP C - *c.nd.1* - Outputs and regulation Process

35	<i>c.ov.1</i>	Command Output	13
38	<i>AcE.1</i>	Action type	13
39	<i>c.HY.1</i>	Command Hysteresis	14
40	<i>LLS.1</i>	Lower Limit Setpoint	14
41	<i>uLS.1</i>	Upper Limit Setpoint	14
42	<i>c.rE.1</i>	Command Reset	14
43	<i>cSE.1</i>	Command State Error	14
44	<i>cLd.1</i>	Command Led	14
45	<i>c.dE.1</i>	Command Delay	14
46	<i>cSP.1</i>	Command Setpoint Protection	14
48	<i>A.nA.1</i>	Automatic / Manual	14
49	<i>in.i.S</i>	Initial State	14
51	<i>iSP.1</i>	Initial Value Setpoint	15

GROUP E - *rEG.1* - Autotuning and PID

73	<i>tun.1</i>	Tune	15
74	<i>S.dE.1</i>	Setpoint Deviation Tune	15
75	<i>P.b.1</i>	Proportional Band	15
76	<i>i.E.1</i>	Integral Time	15
77	<i>d.E.1</i>	Derivative Time	15
78	<i>d.b.1</i>	Dead Band	15
79	<i>P.b.c.1</i>	Proportional Band Centered	15
80	<i>o.oS.1</i>	Off Over Setpoint	15
81	<i>o.dE.1</i>	Off Deviation Threshold	15
82	<i>c.E.1</i>	Cycle Time	15
87	<i>LLP.1</i>	Lower Limit Output Percentage	15
88	<i>uLP.1</i>	Upper Limit Output Percentage	16
89	<i>AG.E.1</i>	Max Gap Tune	16
90	<i>Min.P.1</i>	Minimum Proportional Band	16
91	<i>MA.P.1</i>	Maximum Proportional Band	16
92	<i>Min.i.1</i>	Minimum Integral Time	16
93	<i>o.cL.1</i>	Overshoot Control Level	16

GROUP G - *AL.1* - Alarm 1

123	<i>AL.F.</i>	Alarm 1 Function	16
126	<i>ALSo.</i>	Alarm 1 State Output	16
128	<i>ALHY.</i>	Alarm 1 Hysteresis	16
129	<i>ALL.</i>	Alarm 1 Lower Limit	17
130	<i>ALuL.</i>	Alarm 1 Upper Limit	17
131	<i>ALrE.</i>	Alarm 1 Reset	17
132	<i>ALSE.</i>	Alarm 1 State Error	17
133	<i>ALLd.</i>	Alarm 1 Led	17
134	<i>ALdE.</i>	Alarm 1 Delay	17
135	<i>ALSP.</i>	Alarm 1 Setpoint Protection	17
136	<i>ALLb.</i>	Alarm 1 Label	17

GROUP H - *AL.2* - Alarm 2

141	<i>AL2F.</i>	Alarm 2 Function	17
144	<i>AL2So.</i>	Alarm 2 State Output	18
146	<i>AL2HY.</i>	Alarm 2 Hysteresis	18
147	<i>AL2LL.</i>	Alarm 2 Lower Limit	18
148	<i>AL2uL.</i>	Alarm 2 Upper Limit	18
149	<i>AL2rE.</i>	Alarm 2 Reset	18
150	<i>AL2SE.</i>	Alarm 2 State Error	18
151	<i>AL2Ld.</i>	Alarm 2 Led	18
152	<i>AL2dE.</i>	Alarm 2 Delay	18
153	<i>AL2SP.</i>	Alarm 2 Setpoint Protection	18
154	<i>AL2Lb.</i>	Alarm 2 Label	19

GROUP M - *d.i.1* - Digital input 1

231	<i>d.i.1F.</i>	Digital Input 1 Function	19
232	<i>d.i.1C.</i>	Digital Input 1 Contact	19

GROUP Q - *SS.t.S* - Soft-start and mini cycle

264	<i>SS.tY.</i>	Soft-Start Type	19
266	<i>SS.Gr.</i>	Soft-Start Gradient	19
267	<i>SS.PE.</i>	Soft-Start Percentage	19
268	<i>SS.tH.</i>	Soft-Start Threshold	19
269	<i>SS.ti.</i>	Soft-Start Time	19

GROUP R - *d.SP.* - Display and interface

277	<i>uFlt.</i>	Visualization Filter	19
278	<i>u.i.d.2</i>	Visualization Display 2	20
279	<i>tMo.d.</i>	Timeout Display	20
280	<i>tMo.S.</i>	Timeout Selection	20
282	<i>u.out</i>	Voltage Output	20
283	<i>ScL.t.</i>	Scrolling Time	20
284	<i>dSPF.</i>	Display Special Functions	20
285	<i>nFC.L.</i>	NFC Lock	20

Antes de usar el dispositivo leer con atención las informaciones de seguridad y configuración contenidas en este manual.



www.remberg.es